



# LASER<sup>®</sup>

Part No. 4807

## Oil Dipstick - Audi



When you have finished with this bottle please recycle it

[www.lasertools.co.uk](http://www.lasertools.co.uk)



Distributed by The Tool Connection Ltd

Kineton Road, Southam, Warwickshire CV47 0DR  
T +44 (0) 1926 815000 F +44 (0) 1926 815888  
info@toolconnection.co.uk [www.toolconnection.co.uk](http://www.toolconnection.co.uk)

### Guarantee

If this product fails through faulty materials or workmanship, contact our service department direct on: +44 (0) 1926 818186. Normal wear and tear are excluded as are consumable items and abuse.

[www.lasertools.co.uk](http://www.lasertools.co.uk)

[www.lasertools.co.uk](http://www.lasertools.co.uk)

## How to Use

### Precautions and Preparation:

- Ensure the vehicle is on level ground
- The oil must be up to a minimum temperature of 60° C/140° F
- Switch off engine and wait 5 minutes for oil level to settle

## Setting the tool

1. Set the adjustable ring to the measurement shown below for the vehicle list below and tighten the lock.
2. This sets the length of the dipstick to the engine.
3. Insert the tool into the dip stick tube provided on the vehicle until the adjustable ring touches the top of the tube.
4. Remove the dipstick and read off the level on the lower scale.

Year	Engine Type	Ring Setting	Lower Scale Minimum	Lower Scale Maximum
2009 on	2.0 TFSi	39	0	24
2009 on	3.2 FSi	123	0	13
2009 on	3.0 Supercharged	123	0	13
2009 on	4.2 FSi	175	0	23
2009 on	2.0 TDi CR	62	0	24

