

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.

IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS JACK CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. RETAIN THESE INSTRUCTIONS FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

- WARNING!** Use wheel storage rack on level and solid ground, preferably concrete. Ensure the floor over which the wheel storage rack will be transported is swept clean.
- ▲ DANGER! DO NOT use on tarmacadam or any other soft surface as the wheel storage rack may sink or topple.**
- ▲ DANGER! If a loaded wheel storage rack tips or leans STOP WHAT YOU ARE DOING. MOVE QUICKLY TO A SAFE DISTANCE. DO NOT TRY TO HOLD OR STEADY WHEEL STORAGE RACK.**
- ✓ Use wheel storage rack in a suitable work area, keep area clean and tidy and free from unrelated materials. Ensure there is adequate lighting.
- ✓ Before use, ensure that the size and weight of the wheels **DO NOT** exceed the capacity of the wheel storage rack.
- ✓ Maintain correct balance and footing when loading or moving the wheel storage rack. Ensure the floor is not slippery and wear non-slip footwear.
- ✓ Observe correct manual handling techniques when loading wheels on to the wheel storage rack. If in any doubt, obtain assistance.
- ✓ Apply castor wheel brakes when wheel storage rack is stationary.
- WARNING! DO NOT use wheel storage rack if any parts are damaged or missing.**
- x **DO NOT** allow untrained persons to use the wheel storage rack.
- x **DO NOT** get wheel storage rack wet or use in damp or wet locations or areas where there is condensation.
- x **DO NOT** use the wheel storage rack when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- x **DO NOT** use wheel storage rack for any purpose other than that for which it is designed.
- ✓ Before storing in safe area, ensure all parts are clean, free of grease and oil.
- WARNING: The warnings, cautions and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood that common sense and caution are factors which cannot be built into this product, but must be applied by the operator.**

2. INTRODUCTION & SPECIFICATION

2.1. Introduction

Completely free standing wheel rack for all types of car wheels with rim size up to 225mm. Easy to assemble and no need for wall hooks. Rack has 4 castors for easy manoeuvring around the garage. Eliminates tyre distortion due to loss of pressure. Supplied with rim protecting supports.

2.2. Specification

Model No:STR004
 Overall Size (W x D x H): 460 x 460 x 1165mm
 Wheel Capacity: 4
 Maximum Rim Size: 225mm
 Maximum Weight Capacity: 100kg (25kg per Level)

3. ASSEMBLY & USE


- WARNING! Ensure that you read, understand and apply Section 1 safety instructions.**

3.1. Assembly

- 3.1.1. Unpack the product and check contents. Should there be any damaged or missing parts contact your supplier immediately.
- 3.1.2. The wheel storage rack dismantles into 3 sections for ease of loading and unloading (fig.1).

3.2. Loading

- WARNING! If loading only one or two wheels, DO NOT load them on to the upper section with the lower section still attached to the base section. This will affect the stability of the wheel storage rack and may cause damage and/or personal injury.**
- 3.2.1. Ensure that the base section (fig.1-1) is positioned on level and solid ground and all four castor wheel brakes are applied.
- 3.2.2. Attach the lower section (fig.1-2) to the base section (fig.1-1).
- 3.2.3. Start with the bottom level of the lower section (fig.1-2) and insert the support pin as shown in fig.2.
Note: Ensure that the pin grooves sit in the narrow section in the lower part of hole.
- 3.2.4. Fit a protecting support so that the recess in the body sits on the support pin (fig.3).
- 3.2.5. Load the first vehicle wheel on to the lower section (fig.1-2) so that it sits squarely on the protective support.
- 3.2.6. Insert a support pin (fig.2) into the top level of the lower section (fig.1-2) and fit a protecting support (fig.3). Load the second wheel so that it sits squarely on the protective support.

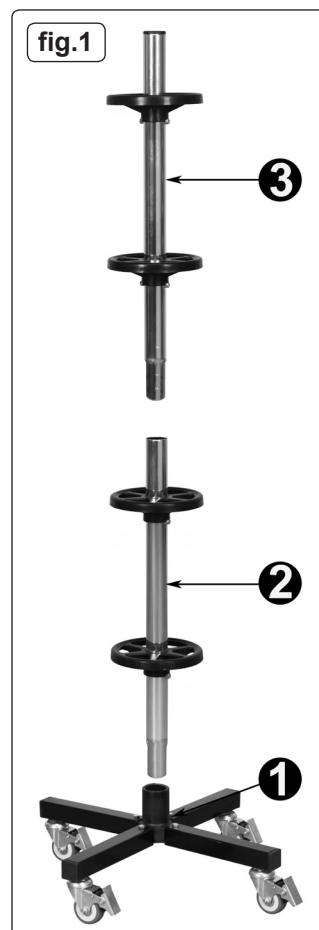


- 3.2.7. Attach the upper section (fig.1-3) to the lower section (fig.1-2).
 3.2.8. Insert a support pin (fig.2) and fit a protecting support (fig.3) to the bottom level of the upper section (fig.1-3) and load the third wheel.
 3.2.9. Fit the final pin (fig.2) and protecting support (fig.3) to the top level of the upper section (fig.1-3) and load the last wheel (fig.4).

3.3. Transporting the Load.

- 3.3.1. Ensure that the path to the storage location is level, clear and free from debris.
 3.3.2. Release the brakes on all four castor wheels.
 3.3.3. Push rather than pull the load to the storage area.
 3.3.4. Once the loaded wheel rack is at the storage location, apply all four castor wheel brakes.

3.4. Unloading

- 3.4.1. Ensure that all four castor wheel brakes are applied.
 3.4.2. Unloading is the reverse of loading. Remove the top wheel, lift off the protecting support (fig.3) and extract the pin (fig.2).
 3.4.3. Continue with the other wheels until unloading is completed.
 3.4.4. When not in use, it is recommended that the wheel storage rack is assembled as shown in fig.5 to reduce the likelihood of any components becoming lost or damaged. Store in a safe, dry, childproof location.

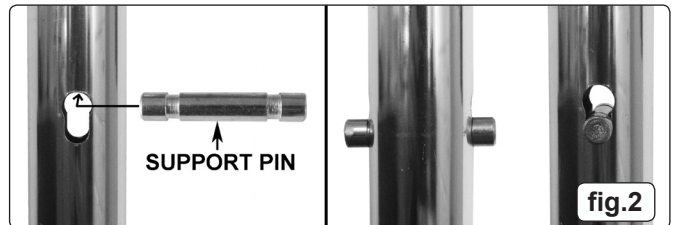

4. MAINTENANCE

- 4.1. Keep the wheel storage rack clean and wipe off any oil or grease.
 4.2. Periodically lubricate the castor wheels with oil.



Parts support is available for this product.
 To obtain a parts list and diagram please log on to www.sealey.co.uk, email sales@sealey.co.uk or phone 01284 757500

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor, Sealey Group,
 Kempson Way, Suffolk Business Park,
 Bury St. Edmunds, Suffolk,
 IP32 7AR

☎ 01284 757500

🌐 www.sealey.co.uk

📠 01284 703534

✉ sales@sealey.co.uk